



Fusebox B

- 1 Heated Rear Window
- 2 Air Conditioner / Heater blower
- 3 Left hand electric window
- 4 Right hand electric window
- 5 Electric cooling fan
- 6 Courtesy lights / Radio
- 7 Screen wiper / Washer / Clock / Stop Lights
- 8 Turn signal / Cigar Lighter

Fusebox A

- 1 Ignition / Fuel pump / Relays
- 2 Ignition / Fuel pump
- 3 Parking lights / Backup Lights / Headlight Slats
- 4 Parking lights / Instrument Lights
- 5 Left hand high beam
- 6 Right hand high beam
- 7 Left hand low beam
- 8 Right hand low beam

- 9 Front parking and directional indicator light - 5/21 W
- 10 Head light, low beam - 55 W
- 11 Head light, high beam - 55 W
- 12 Side directional indicator light - 4 W
- 13 Electric horn
- 14 Electric fan
- 15 Compressor for air horns
- 16 Headlight slats control valve
- 17 Thermal switch for electric fan
- 18 Engine compartment light switch
- 19 Engine compartment light - 5 W
- 20 Air conditioner electric fan (optional)
- 21 Low fuel pressure warning light switch
- 22 Overcurrent relay for electric windows (optional)
- 23 Relay for electric windows (optional)
- 24 Electric fan relay
- 25 Windscreen washer pump
- 26 Horn relay
- 27 Voltage regulator - Bosch AD 1/14V
- 28 Resistor for alternator excitation
- 29 Transistor control unit - Bosch BHKZ 12V
- 30 Air conditioner compressor (optional)
- 31 Coolant thermometer sender

- 32 Alternator - Bosch K1 -14V 55A 20
- 33 Coil - Bosch ZS 7/9 C 8
- 34 Fuel cut off solenoid microswitch
- 35 Fuel cut off solenoid
- 36 Distributor - Marelli S 127 C
- 37 Cold starting device solenoid
- 38 Starter - Bosch GF 12V 1 Ps69
- 39 Oil pressure gauge sender
- 40 Oil thermometer sender
- 41 Brake fluid level warning light switches
- 42 Air conditioner fan thermo Switch (optional)
- 43 Air conditioner fan relay (optional)
- 44 Heated rear window relay
- 45 Resistor for blower motor
- 46 Fusebox
- 47 Windscreen wiper control unit
- 48 Windscreen wiper switch
- 49 Courtesy light switch in mirror
- 50 Courtesy light in mirror - 5 W
- 51 Blower motor
- 52 Stop light switch
- 53 Flasher unit

- 54 Directional indicator warning light - 1.2 W
- 55 Reversing light switch
- 56 Instrument light - 3 W
- 57 Blower warning light - 3 W
- 58 Parking brake warning light - 3 W
- 59 Low fuel pressure warning light - 3 W
- 60 Parking light warning light - 3 W
- 61 High beam warning light - 3 W
- 62 Fuel reserve warning light - 3 W
- 63 Brake fluid level warning light - 1.2 W
- 64 Fluid level warning light testing switch (in light unit)
- 65 Map reading light - 5 W
- 66 Door open switch (on door jams)
- 67 Courtesy light switch (on door jams)
- 68 Electric window motor
- 69 Door light - 3 W
- 70 Interior lighting switch
- 71 Control and instrument lights switch
- 72 Electric window switch, right (optional)
- 73 Electric window switch, left (optional)
- 74 Horn change over switch
- 75 Windshield wiper switch
- 76 Switch panel light - 3 W

- 77 Heated rear window warning light - 1.2 W
- 78 Heated rear window switch
- 79 Blower switch
- 80 Cigarette lighter
- 81 Air conditioner temperature control (optional)
- 82 Emergency flasher switch
- 83 Emergency flasher warning light - 1.2 W
- 84 Air conditioning warning light switch
- 85 Ignition and starting switch
- 86 Horn control switch
- 87 Parking light, head lights, and flashing switch
- 88 Directional indicator switch
- 89 Courtesy light - 4 W
- 90 Luggage boot light switch
- 91 Boot light - 5 W
- 92 Fuel pump
- 93 Fuel reserve warning light switch & fuel level sender
- 94 Heated rear window
- 95 Battery - 12 V 64 Ah
- 96 Rear directional light - 25 W
- 97 Rear parking & stop light - 5/21 W
- 98 Reversing light - 25 W
- 99 Number plate light - 5 W



Alfa Romeo
MONTREAL